

ZX-FRANKENSTEIN 2.0



WARNING:


DO NOT, AND I MEAN DO NOT, DO NOT PLUG IN ZX-FRANKENSTEIN WHILE THE ZX SPECTRUM IS PLUGGED INTO THE POWER. DOING SO MAY DAMAGE YOUR COMPUTER.

WHEN ATTACHING ZX-FRANKENSTEIN TO YOUR ZX SPECTRUM, MAKE SURE THE KEY NOTCH ON THE EDGE CONNECTOR OF THE COMPUTER MATCHES UP WITH THE KEY IN THE EDGE SLOT OF THIS DEVICE. DO NOT USE TOO MUCH FORCE.

WHEN REMOVING ZX-FRANKENSTEIN FROM THE COMPUTER, IT MAY BE A LITTLE STIFF. REMOVE IT SLOWLY WITH ENOUGH FORCE.

WE (YOU MAKE ROBOTS) DO NOT TAKE ANY LIABILITY FOR DAMAGE TO YOUR COMPUTER WHILE USING THE ZX-FRANKENSTEIN

TO OPERATE A YOUMAKEROBOTS DIGITAL TAPE DEVICE

- Purchase a microSD card:
 1. Not a cheap one
 2. Class 10 is now support
- Format to Fat32 (Use SD formatter)
- Download/Copy your favourite game onto the MicroSD card using your laptop/PC
- The TOSEC Archive has many 1000s of Retro Computer games from the past. Please note that some of the games in TOSEC are corrupt. So if you try a game that doesn't load, please try many others to make your digital tape device work.
- File Format
 1. ZX80/ZX81 = .p or .tap
 2. Spectrum = .tzx or .tap
 3. Amstrad = .cdt or .tsx
- Please note that the above is not limited, and the digital tape device will run a version of the MaxDuino firmware that suits your retro computer to support these formats.
- Games may reside in directories on the MicroSD card
- Use the up/down ▲ ▼ keys to move up and down the list of files
- If you see a file you want to load, press the play key ►
- If you want to move into a folder, press the play key
- The play key acts as a pause key too
- To move back out of the folder, press the stop key ■
- If you want to change the baud rate, press the menu key 
- If the device has one, you can reset the device with the reboot button
- The green audio jack is the AY Sound which plugs into active speakers
- The black audio jack is the TAPE out and plugs into the EAR on your computer.